

WIRELESS TRANSMITTER **WS310**

TRANSMITTER FOR RECEIVERS WS3XX

for remote control of up to 4 various appliances

**POWER 2x1.5 V
button batteries**



**FOUR-CHANNEL
KEY CASE**

RECEIVER UNDER THE SWITCH WS301



RECEIVER SOCKET MOUNTED WS303

DECLARATION OF CONFORMITY

We, ELEKTROBOCK CZ s.r.o., here declare that our product WS310 is in conformity with the basic requirements and other respective provisions of the directive 1999/5/ES.

Issued: 1.10.2008



RECEIVER WALL MOUNTED WS302

WIRELESS TRANSMITTER WS310

ACTIVATION PROCEDURE:

- 1, Unscrew the two screws on the back of the key case (see Fig.1).
- 2, Insert the button-type battery 2x1.5 V type GP394 (when using for the first time remove the protective paper from the battery) see Fig.2.
- 3, By pressing the button the coded signal is sent and then evaluated by the receiver. For commissioning the code of the key case must be uploaded to the receiver (see receiver's instructions). Code transmission is indicated by a red light (see Fig.3).

SCREWS
(to remove the rear cover)



Fig.1

PLACE FOR
BATTERIES
(2x1.5V/ GP394)



Fig.2

RED LED
(indicates transmission
of code)



Fig.3

CONTROL
BUTTONS

Examples of use in connection with the receiver WS3xx: to control pumps, lights, garage doors, el. drive etc.

List of products is on na www.elbock.cz

TECHNICAL PARAMETERS

Power supply	2x1.5 V, typ GP394 (included)
Hf power	< 10 mW
Frequency	433.92 MHz
Protection	IP44
Battery lifetime	up to 2 years
Working temp.	0°C to 50°C

**In case of guarantee
or post-guarantee
service, send the
WS310 to
the distributor or
manufacturer's address.**

ELEKTROBOCK CZ s.r.o.

Blanenská 1763

Kuřim 664 34

Tel.: +420 541 230 216

www.elbock.cz



8 594012 222144

